 


# **Interface Description**



Button/interface	Function
1 Power input	Connection adapter.
2 Type-C	Receive data via USB.
3 HDMI • OUT	Connect to display devices such as TVs and monitors.
4 HDMI•IN	Connect to camera,computer,etc.for image acquisition.
5 RJ45	Connect the network cable to use the Internet.
6 POE	Connect POE devices, such as omnidirectional mics and cameras.
7 USB3.0	Connect USB devices, such as USB mouse, keyboard, etc.
8 USB2.0	Connect USB devices, such as USB mouse, keyboard, etc.
9 3.5mm Audio input port	Audio input interface for connecting to audio devices.
10 3.5mm Audio output Port	Audio output interface, connected to audio equipments.
11 Power button	Turn on/off.
12 Reset button	Restore system.

# **Precautions and Warnings for Safe Use**

In order to protect your safety, please read the following safety instructions carefully before using this product. Improper use may result in serious personal injury or property damage,do not attempt to repair this product yourself.

## WARNING:

- In the event of a serious failure, immediately unplug the power supply.
- Serious failures include:

  There is smoke, strange smell or unusual sound inside the unit.
- There is no picture, sound or picture distortion.
   If the above abnormal situation occurs, please disconnect the power immediately, do
- not continue to use this product, and ask a professional to repair it.
- Avoid liquids, metals or combustibles from entering the body.
- If liquid or metal falls into the machine, please shut down and cut off the power immediately, and contact a professional to deal with it.
- Do not place this product on an unstable surface.

   Unstable surfaces include: sloped or wobbly stands, tables, stands,etc., which may cause the product to tip over and cause injury.
- Please use the specified supply voltage.
- In order to avoid the danger caused by burning the machine, use the standard power cord of this machine when using this product, and do no use other types of power
- Be sure to use a three-wire power outlet and ensure that its ground wire is well
- When not in use for a long time, please unplug the main unit from the socket.
- Regularly clean the dust or metal around the prongs of the power plug.

  Continuing to use the product without cleaning the inserts for a long period of time may result in fire or electric shock.

  • You must unplug the power cord first, and then clean the plug with a dry cloth.
- Do not install this product in an improper location.
- Avoid damp places, such as bathrooms, shower rooms, near windows and outdoor places where rain, snow or other harsh conditions may occur; eanwhile, please avoid installing this product in places where it may come into contact with hot spring water vapor.

- Unplug your device from power during a lightning storm.

   To reduce the risk of electric shock, please do not touch this product during lightning
- The components of the product that supply more than the safe voltage should be installed or placed out of the reach of children. Do not handle the power cord with wet hands, otherwise it may cause electric shock

- Do not install this product in a high temperature environment • Do not install near heat sources, such as radiators, heat storage, stoves or other
- heat-generating equipment.

  Keep this product out of direct sunlight. Failure to do so may heat up the body and
- cause a malfunction.
  The ambient temperature/humidity is as follows:
  Working temperature: 0-40 degrees.
- Humidity: 10%RH-90%RH (non-condensing)
- When transporting this product:
- If the product needs to be transported for movin cushioning material provided with the product.
- Do not cover or block any vents on this product, as doing so may cause the unit to
- overheat which could cause a fire or damage the product and shorten its life.

   Do not place this product with the ventilation side facing down.

   Do not install this product on carpet or bedding.
- · Do not cover this product with a tablecloth, etc.
- Personal injury or product damage may result if caution information is ignored.

This product should not be thrown away at will after it has expired or has been repaired and fails to work normally. Please hand it over to an enterprise qualified to dispose of waste electrical and electronic products. For the correct method, please refer to the national or local regulations on the disposal of waste electrical and electronic products.

## EU Conformity Statement

This product complies with the applicable CF marking directives and standards: Electromagnetic Compatibility (EMC) Directive 2014/30/EU. Low Voltage (LVD) Directive 2014/35/EU. Restrictions of Hazardous Substances (RoHS) Directive 2011/65/EU and its amending Directive (EU) 2015/863.




Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info

Ingrisourid Flessure
To avoid hearing damage, do not listen for long periods at high volume.
Do not turn the volume so high that you' re unable to hear your surroundings. Do not use the unit while walking, driving or cycling. Doing so may cause traffic accidents. Do not use at a dangerous place unless the surrounding sound can be heard.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired

digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the —Consult the dealer or an experienced radio/TV technician for help.

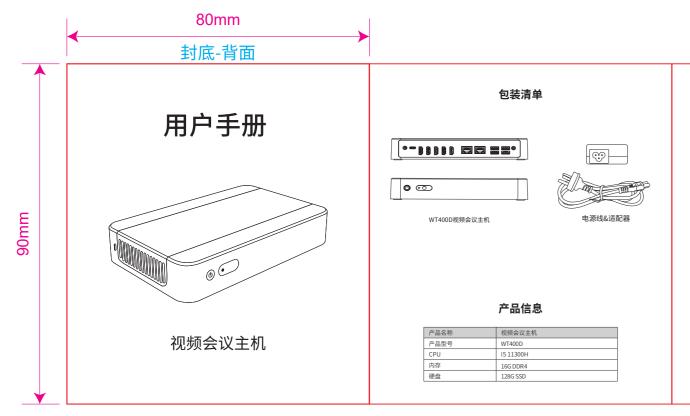

# **6** 6 端口 端口功能

接口说明

1 电源接口	连接电源
2 Type-C	通过USB读取数据
3 HDMI • OUT	连接电视、显示屏等显示设备
4 HDMI•IN	连接摄像机、电脑等图像采集
5 网线	连接网线以使用互联网
6 POE	连接POE设备,如全向麦、摄像头等
7 USB3.0	连接USB设备,如移动硬盘、USB 鼠标、键盘、U盘等
8 USB2.0	连接USB设备,如移动硬盘、USB鼠标、键盘、U盘等
9 音频 3.5mm 输入口	音频输入接口,连接到音频设备,如调音台等
10 音频 3.5mm 输出口	音频输出接口,连接到音频设备,如耳机,音箱等
11 开关键	开关机
12 还原键	还原系统

## 安全使用注意事项和警告

为了保障您的安全,请在使用本产品前认真阅读以下安全须知说明。使用 不当可能导致严重的人身伤害或财产损失,切勿试图自行修理本产品。

发生严重故障时请立即拔出电源。

• 机内出现冒烟、产生异味或出现异常声音。 • 没有图像、声音或图像失真。

出现以上异常情况,请立即断开电源,不要继续使用本产品,并请专业人员

避免液体、金属或可燃物进入机体内。

• 如有液体、金属掉入机内请立即关机及切断电源,并联系专业人员处理。

请勿将本产品放置在不平稳表面上。

•不平稳表面包括:斜面或摇晃的支架、桌子、台子等,这可能导致产品翻

- 为避免烧毁本机造成危险,使用本产品时使用本机标配电源线, 请勿使用其他类型的电源线。
- 务必使用三线电源插座并确保其地线接地良好。
- 长期不使用时,请将主机的电源拔离插座。

# 定期清洁电源插头插片周围的灰尘或金属。

- 在长期不清洁插片的情况下继续使用本产品可能引起火灾或触电。
- •必须先拔出电源线,再用干布清洁插片。

• 应当避开潮湿的地方,如浴室、淋浴房、窗户附近及室外可能遭遇雨、雪 或其他严酷条件的地方;同时请避免将本产品安装在可能接触到温泉水汽的地方。 否则可能引发故障,或在极端情况下存在触电危险。

在闪电暴雨时请拔除设备的电源。

• 为了降低触电危险,闪电时请不要接触本产品

• 应把供电大于安全电压的产品组件安装或放置在儿童接触不到的位置。

请勿用湿手操作电源线,否则可能造成触电。

请勿将本产品安装在高温环境中。

- 请勿在执源附近讲行安装, 如散热器、储热器、炉灶或者其他产热设备等。
- 避免本产品受到阳光直射。否则可能使机体温度升高,并引发故障。 环境温度/湿度如下:
- 工作温度: 0-40度; 湿度: 10%RH-90%RH(无冷凝)

## 运输本产品时.

如果由于搬动或维修需要运输本产品,应使用本产品随附的纸箱和缓冲材料。

请勿盖住或堵塞本产品上的任何通风口,否则可能导致设备过热而引起火

- 灾或损坏产品,缩短其使用寿命。
- 不能将本产品的通风面朝下放置。 ·不得将本产品安装在地毯或被褥上。
- 不要用桌布等盖住本产品。

如果忽视注意事项信息,可能造成人身伤害或者损坏产品。

技术要求:

文件名: WT400D\_中英文说明书\_V1

尺寸: 80\*90mm

材质: 80g铜版纸,正反面单色印刷,风琴折(5折6页)