# 4+2 Input HDBaseT Switching Extender with USB2.0 & Relay Triggering

# EX-SW-0401-H2-PR0



**Quickstart Guide** 

WyreStorm recommends reading through this document in its entirety to become familiar with the product's features before beginning the installation process.



# IMPORTANT! Installation Requirements

- Read through the Wiring and Connections section for important wiring guidelines before creating or choosing premade cables.
- While this product supports CEC, WyreStorm cannot guarantee compatibility with all forms of CEC communication.
- Visit the product page to download the latest firmware, document version, additional documentation, and configuration tools.


#### Information and Parts Required for Installation

This extender requires connection via RS-232 or Ethernet in order to configure functions such as EDID. Ensure that the following items are on hand before proceeding with the installation.

- PC or Mac
- Telnet and Terminal software such as PuTTY
- USB COM Port Adapter (Not Included)
- WyreStorm Part: CAB-USB-3PIN
- Network router and/or switch if using IP telnet for configuration.
- Latest version of the EX-SW-0401-H2-PRO API for advanced configuration not covered in this document.

#### In the Box

1x EX-SW-0401-H2-PRO Transmitter 1x EX-SW-0401-H2-PRO Receiver 2x 12V DC Power Supply (US/UK/EU) 1x IR Transmitter 1x IR Receiver 4x Mounting Brackets (2x for TX | 2x for RX) 5x 3-pin Screw Down Phoenix Connector 2x 4-pin Screw Down Phoenix Connector 1x Quickstart Guide (This Document)

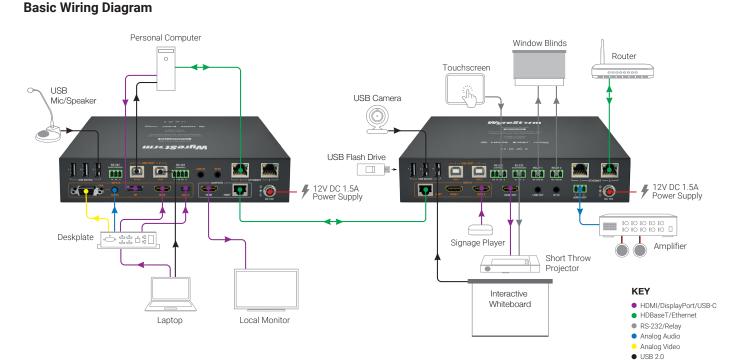

# Wiring and Connections

WyreStorm recommends that all wiring for the installation is run and terminated prior to making connections to the switcher. Read through this section in its entirety before running or terminating any wires to ensure proper operation and to avoid damaging the equipment.

 
# IMPORTANT! Wiring Guidelines

- The use of patch panels, wall plates, cable extenders, kinks in cables, and electrical or environmental interference will have an adverse effect on signal transmission which may limit performance. Steps should be taken to minimize or remove these factors completely during installation for best results.
- WyreStorm recommends using pre-terminated VGA, HDMI, DP and USB cables due to the complexity of these connector types. Using pre-terminated cables will ensure that these connections are accurate and will not interfere with the performance of the product.

# **Audio Connections**

### Audio In (TX)

The audio connections use a 3.5mm (1/8in) TRS Stereo Jack.



# **Communication Connections**

#### RS-232 Wiring

The EX-SW-0401-H2-PRO uses a 3-pin RS-232 with no hardware flow control. Most control systems and computers are DTE where pin 2 is RX, this can vary from device to device. Refer to the documentation for the connected device for pin functionally to ensure that the correct connections can be made.

#### PC Connection

Connection to a PC uses the RS-232 Control connection and requires the use of a USB to 3-pin Port Adapter cable (CAB-USB-3PIN) in order for a port to be provided on the PC. Note that this adaptor can be used on both v1 and v2 versions.

#### **Relay Wiring**

The relays on this extender can be used to be trigger devices such as projector screens that are Normally Open (NO) or Normally Closed (NC).

# Troubleshooting

#### No or Poor Quality Picture (snow or noisy image)

- · Verify that power is being supplied to the transmitter and receiving device.
- Verify that all HDMI and HDBaseT connections are not loose and are functioning properly.
- Verify that the HDBaseT cable is properly terminated following EIA568B standard.
- Verify that the output resolution of the source and display is supported by this extender.
- Configure EDID Settings to a lower resolution.
- If transmitting 3D or 4K, verify that the HDMI cables used are 3D or 4K rated.

 This product contains a USB-C connection that can be used as an audio/ video input. When using this connection verify that the USB-C cable used supports audio/video functionality as not all USB-C cables support this requirement.

#### Cat6 Cable Performance Guide

0m	20m	40m	60m	80m	100m	110m	120m	130m	140m	150m
Oft	66ft	131ft	197ft	262ft	328ft	360ft	394ft	427ft	459ft	492ft
4	<b>K</b> Transn	nission	HD	Transmi	ssion					

 
#### Audio Out (TX/RX)

1 2 3	WyreS	WyreStorm Connector		3rd Party Device
123	Pin 1	L (Left Signal)	> To>	Left Signal (L+)
000	Pin 2	R (Right Signal)	> To>	Right Signal (R+)
	Din 2	GND (Ground)	. То	Left Ground (L-) Right Ground (R-)
	PIII 3		> 10>	Right Ground (R-)

#### **RS-232 Passthrough**

	WyreS	torm Connector		3rd Party Device
123	Pin 1	TX (Transmit)	> To>	RX (Receive)
000	Pin 2	RX (Receive)	> To>	TX (Transmit)
	Pin 3	G (Ground)	> To>	G (Ground)

#### **RS-232** Control



123	,	torm Connector		3rd Party Device		
123	Pin 1	NO (Normally Open)	> To>	NO (Normally Open)		
000	Pin 2	Common (Ground)	> To>	Common (Ground)		
	Pin 3	NC (Normally Closed)	> To>	NC (Normally Closed)		

#### No or Intermittent 3rd party Device Control

Verify that the IR, RS-232, and Ethernet cables are properly terminated following the Wiring and Connections section.

#### **Relays Not Functioning**

Verify polarity of the relay connections.

# Troubleshotting Tips

• WyreStorm recommends using a cable tester or connecting the cable to other devices to verify functionality.

Copyright © 2018 WyreStorm Technologies | wyrestorm.com EX-SW-0401-H2 Quickstart Guide | 180919

# **Setup and Configuration**

The EX-SW-0401-H2-PRO is configured using RS-232 and/or Telnet commands for IP address, Output Resolution, and EDID. Follow these steps to properly configure the extender based on the system requirement.

Note: The steps and information provided in this QSG are for basic operation of the extender out of the box. Refer to the EX-SW-0401-H2-PRO API for full configuration settings.

1. Assign a Static IP Address to ensure proper communication on an IP Network. See Configuring a Static IP Address

2. Set EDIDs to be used at each input of the device. See Configuring Input EDIDs

#### **Communication Settings**

The commands listed below can be sent by connecting to either the TX or RX for RS-232 and the RX only for Ethernet. Each device must be connected together via HDBaseT in to order to send a command from one device to the other. The only exception is Configuring a Static IP Address which requires connection to the RX.

The EX-SW-0401-H2-PRO contains a web UI that can be accessed by connecting to a network and entering the IP address. We recommend that the IP address is changed from default before accessing the web UI for the first time.

## RS-232 and IP Settings

	-
Baud rate:	115200
Data Bits:	8bits
Parity:	None
Stop Bits:	1bit
Flow Control:	None
Default IP Address	192.168.11.43
Default IP Port	23

# **Configuring a Static IP Address**

By default, the switcher is set to a static IP of 192.168.11.043. We recommend changing this as it shared with other WyreStorm products and may cause improper communication if left unchanged. Connect to the RX via RS-232 and send the following command to set the IP address.

SET IPADDR STATIC ip4addr [IP Address] netmask [Netmask]<CR><LF> Example: SET IPADDR STATIC ip4addr 192.168.11.243 netmask 255.255.255.0 <CR><LF> Response: IPADDR STATIC ip4addr 192.168.11.243 netmask 255.255.255.0 <CR><LF>

Note: This command can only be sent to the receivers (RX) RS-232 port.

# **Configuring Input EDIDs**

By default, all inputs are set to an EDID or 1920x1080@60Hz 2CH. However, this can be configured to suit the installation.

Set Input EDID SET EDID [Input] [Resolution] [Device] <cr><lf></lf></cr>	Input= VGA   DP   TXHDMI   USBC   RXHDMI1   RXHDMI2 Resolution={Below tables based on connection}			
Example: SET EDID in1 1 tx <cr><lf></lf></cr>	VGA EDID	HDMI/USB-C EDIDs		
Response: EDID SET in1 1 tx <cr><lf></lf></cr>	1024x768@60Hz 2CH	1024x768@60Hz 2CH		
Query Input EDID	1280x768@60Hz	1280x720@60Hz		
GET EDID [Input] [Device] <cr><lf></lf></cr>	1360x768@60Hz	1360x768@60Hz		
Example: GET EDID in1 tx <cr><lf></lf></cr>	1440x900@60Hz	1440x900@60Hz		
Response: EDID GET in1 1 tx <cr><lf></lf></cr>	1600x900@60Hz	1600x900@60Hz		
	1680x1050@60Hz	1680x1050@60Hz		
	1920x1080@60Hz	1920x1080@60Hz		
	1920x1200@60Hz	3840x2160@30Hz		

3 of 4

# Specifications

Audio and Video					
	Transmitter		Receiver		
Inputs	1x VGA In: 15-pin VGA 1x Display Port In: DisplayPort 1.3 1x HDMI In: 19-pin type A 1x Audio In: 3.5mm (1/8in) TRS Stereo 1x Line In: 3.5mm (1/8in) TRS Stereo		2x HDMI: 19-pin type A 1x HDBT In: 8-pin RJ-45 Female		
Outputs	1x HDMI Out: 19-pin type A 1x HDBT Out: 8-pin RJ-45 Female		1x HDMI Out: 19-pin type A 1x Audio Out: 3-pin Phoenix 1x Line Out: 3.5mm (1/8in) TRS Stereo		
Video Encoding	HDBaseT Class C				
Encoding Data Rate	9.2Gbps				
End to End Latency	10µs (micro seconds)				
Audio Formats	2ch Analog/PCM   Multichannel: LPCM				
	Video Resolution	HDMI	Cat6	Cat6a/7	
	1920x1200p @60Hz 8bit	15m/49ft	150m/492ft	150m/492ft	
Video Resolutions (Max)	1920x1080p @60Hz 8bit	15m/49ft	150m/492ft	150m/492ft	
	3840x2160p @30Hz 8bit 4:4:4	7m/23ft	100m/328ft	100m/328ft	
	4096x2160p @60Hz 8bit 4:2:0	7m/23ft	100m/328ft	100m/328ft	
Supported Standards	DCI   RGB				
Maximum Pixel Clock	297MHz				
Communication and Control					
HDMI	HDMI   HDCP 2.2   EDID   DVI/D support	ed with adapter (not ir	ncluded)		
HDBaseT	HDMI   HDCP 2.2   EDID   CEC   2ch audio   USB				
Ethernet	2x 8-pin RJ-45 female   Web UI   IP Control   Bidirectional over HDBaseT				
RS-232	1x RS-232 (Control): 3-pin Phoenix   1x RS-232 (Passthrough): 3-pin Phoenix				
IR	1x IR TX: 3.5mm (1/8in) TS Mono				
Relays	1x Screen UP: 3-pin Phoenix   1x Screen	DWN: 3-pin Phoenix			
USB	1x USB-C: USB 3.1 Audio/Video (Transmitter Only)   2x USB Host: USB-B   3x USB Device: USB-A (Transmitter and Receiver)				
Power					
Power Supply	12V DC 2A				
Max Power Consumption	Transmitter: 14.02W   Receiver: 16.25W				
Environmental					
Operating Temperature	0 to + 45°C (32 to + 113 °F), 10% to 90%	, non-condensing			
Storage Temperature	-20 to +70°C (-4 to + 158 °F), 10% to 90°	%, non-condensing			
Maximum BTU	Transmitter: 56.3BTU/hr   Receiver: 55B	TU/hr			
Dimensions and Weight					
	Transmitter		Receiver		
Rack Units/Wall Box	<1U		<1U		
Height With   Without Feet	44.5mm/1.76in   42mm/1.66in		44.5mm/1.76in   42mm/1.66i	n	
Width With   Without Brackets	263mm/10.36in   220mm/8.67in 26		263mm/10.36in   220mm/8.67in		
Depth With   Without Handles	148.7mm/5.86in   148.7mm/5.86in		148.7mm/5.86in   148.7mm/	5.86in	
Weight	0.97kg/2.13lbs		0.95kg/2.09lbs		
Regulatory					
Safety and Emission	CE   FCC   RoHS				

Note: WyreStorm reserves the right to change product specification, appearance or dimensions of this product at any time without prior notice.

#### Warranty Information

WyreStorm Technologies LLC warrants that its products to be free from defects in material and workmanship under normal use for a period of five (5) years from the date of purchase. Refer to the Product Warranty page on wyrestorm.com for more details on our limited product warranty.

